

Z1 – maximum speed value for DOUT1 if needed.
Z2 – maximum speed value for DOUT2 if needed.

<i>battery</i>	Returns battery state info.	Да	Общая группа
<i>wdlog</i>	Returns all information about 'watch dogs'	Да	Общая группа
<i>defaultcfg</i>	Load default configuration.	Да	Общая группа
<i>setkey</i> # #	Add new or change current configuration keyword. If device is locked, keyword cannot be changed. 1.# - old keyword (if adding new keyword space). 2.# - new keyword.	Да	Общая группа
<i>delkey</i> #	Remove existing keyword (If device is locked, keyword cannot be changed). 1.# - old keyword.	Да	Общая группа
<i>bbread</i> #	Return black box information (HEX value of event ID and HEX value of custom data field (optional)). 1.# - returns entered number of latest events. When # is omitted the latest events are packed to single SMS.	Да	Общая группа
<i>bbinfo</i> #	Return same information as <i>bbread</i> command but additional all events timestamp is written in HEX. 1.# - returns entered number of latest events. When # is omitted the latest events are packed to single SMS.	Да	Общая группа
<i>sdformat</i>	Format SD card.	Да	Общая группа

Bluetooth Commands

Команда	Описание	Ответ	Группа
<i>btgetlist</i> #	Returns requested Bluetooth list. # - 0,1 or 2 (0 – Discovered, 1 – Paired, 2 – Connected, 3 – Discovered BT4/BLE devices).	Да	Bluetooth Команда
<i>btscan</i>	Starts Bluetooth scan.	Да	Bluetooth commands
<i>btvisible</i> #	Sets Bluetooth to visible with TMO. # - visibility TMO (from 1 to 255 seconds).	Да	Bluetooth commands
<i>btrelease</i> #	Disconnects from current device and pauses auto connect functionality for TMO. # - none or TMO (from 1 to 255 seconds).	Да	Bluetooth commands
<i>btunpair</i> #	Unpair Bluetooth device. # - all, BT address (all – unpair all devices, BT address – unpair only specified MAC address).	Да	Bluetooth commands

Commands Related to Features

Команда	Описание	Ответ	Группа
<i>fc_reset</i>	Resets fuel consumption parameters.	Да	Commands related to features
<i>towingreact</i>	Towing reactivation.	Да	Commands related to features

auto_calibrate:set	Returns the state of calibration.	Да	Commands related to features
odose#	Set total odometer value. # - new odometer value in km.	Да	Commands related to features
odoget	Display current odometer value.	Да	Commands related to features
on_demand_trackingX	X=0 – Stops Tracking on Demand functionality. X=1 – Starts Tracking on Demand functionality. X=2 – Generates one high priority record and initiates data sending to server.	Да	Commands related to features

Note: This command is supported from 03.25.06 firmware version.

OBD Commands

Команда	Описание	Ответ	Группа
obdinfo	If connected with Bluetooth OBD dongle displays all available information from OBD.	Да	OBD Commands
faultcodes	If connected with Bluetooth OBD dongle display all visible fault codes.	Да	OBD Commands
cleardtc	Clears all vehicle stored fault codes.	Да	OBD Commands
getvin	Get vehicle VIN code, if OBD dongle is connected.	Да	OBD Commands

CAN Adapter Commands

Команда	Описание	Ответ	Группа
lvcansetprog #	Set program number to CAN Adapter # three to five digit vehicle specific number	Да	CAN Adapter Commands
lvcangetprog	Get program number from CAN Adapter	Да	CAN Adapter Commands
lvcangetinfo	Get information about connected CAN adapter	Да	CAN Adapter Commands
lvcansimpletacho #	Add or remove simpletacho start byte. # - 0 or 1 (0 – don't add start byte, 1 – add start byte).	Да	CAN Adapter Commands
lvcanclear #	Clear Total Mileage (counted), Engine Work Time (counted), Fuel Consumed (counted) parameters values. # - parameter (0 – Engine work time (counted), 1 – Fuel Consumed (counted), 2 – Vehicle Mileage (counted))..	Да	CAN Adapter Commands
allcanmode	Turn on ALL-CAN300 mode.	Да	CAN Adapter Commands
lvcanmode	Turn on LV-CAN200 mode.	Да	CAN Adapter Commands
lvcanfaultcodes	Read DTC fault codes.	Да	CAN Adapter Commands

<i>lvcanopenalldoors</i>	Toggle CAN-CONTROL to open [unlock] all doors	Да	CAN Adapter Commands
<i>lvcanclosealldoors</i>	Toggle CAN-CONTROL to close [lock] all doors	Да	CAN Adapter Commands
<i>lvcanopentrunk</i>	Toggle CAN-CONTROL to open [unlock] trunk	Да	CAN Adapter Commands
<i>lvcanturninglights</i>	Toggle CAN-CONTROL to flash lights One flash of all turn lights ordered through accidental / blinking turn light switch	Да	CAN Adapter Commands